




SCI-FI GOTHIC COLLECTION

SMALL MACHINES

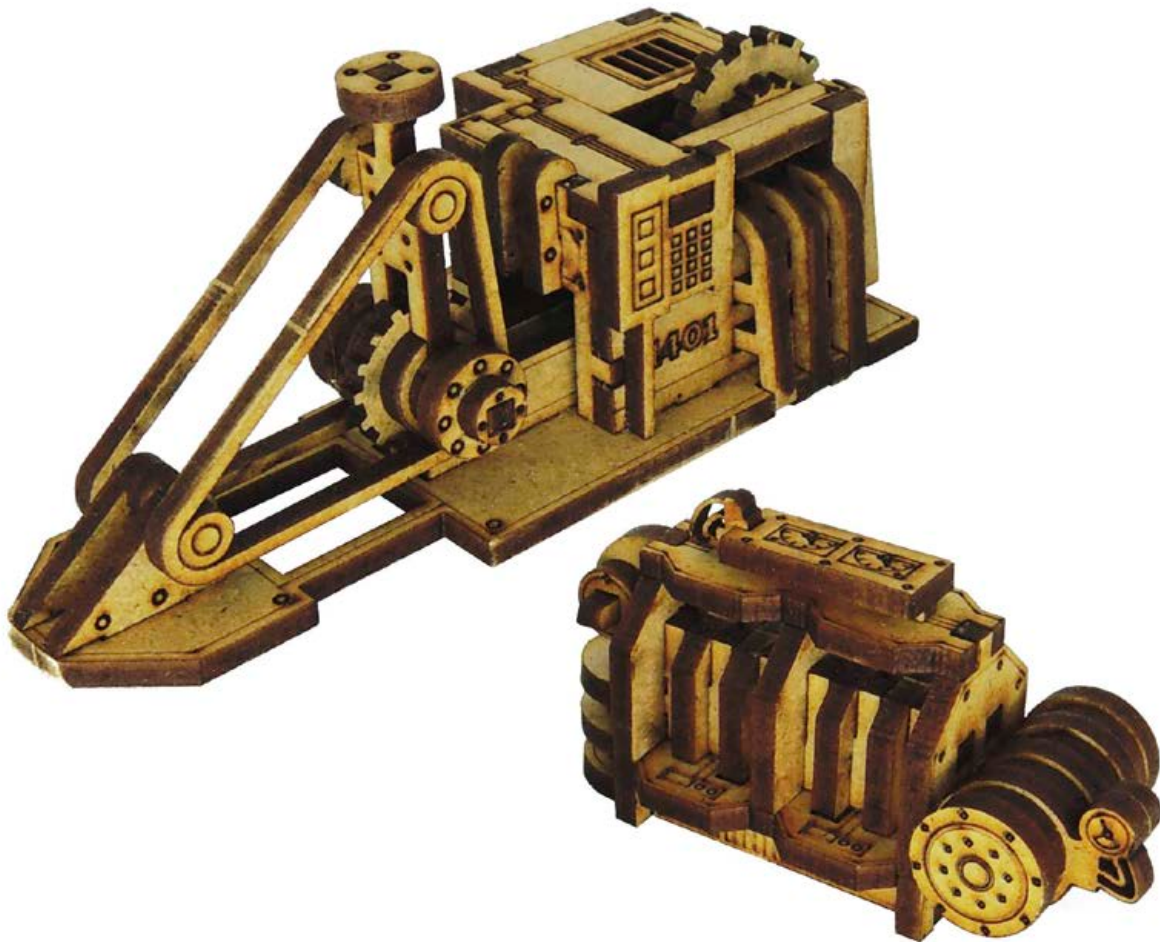

Code: JEFF0032

MDF MODEL SCENERY for 28-32 mm tabletop wargaming.

Modelling kit. This is not a toy. May contain small parts.
Not suitable for children under the age of 12. Requires
assembly. Supplied unpainted.

www.dryad-creations.be

[f dryadcreations](https://www.facebook.com/dryadcreations)

[i dryad_creations](https://www.instagram.com/dryad_creations)

 100% made
in Belgium.

© DRYAD Creations 2022.
All rights reserved.

BEFORE ASSEMBLING YOUR KIT, CAREFULLY READ THE FOLLOWING INSTRUCTIONS.

To assemble this kit, you will need several tools:

A modelling knife

Use the modelling knife to detach the pieces from their frame. Do not push them with your fingers or you might break the most fragile parts.

Sandpaper or a small wood file

Sand or file away any rough edges where the parts were attached to the panel.

Wood glue or liquid cyanoacrylate


Glue the pieces according to the assembly plan. Wood glue will take longer to dry than cyanoacrylate glue, but is easier to reposition in case of error.

When assembling this kit, make sure the pieces fit together properly before gluing them together.


You may find some of these icons in the assembly plan.
They will provide you with additional information for your assembly.



Indicates
the direction
of gluing

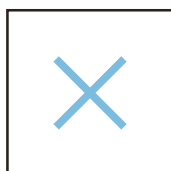


Do not glue

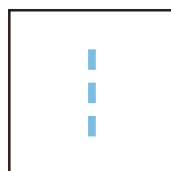

Align



Important
note

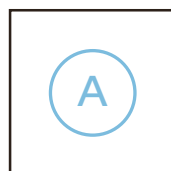

Construction
stage



End
of stage



Assembly
alternatives

AVANT D'ASSEMBLER VOTRE KIT, LISEZ ATTENTIVEMENT LES INSTRUCTIONS SUIVANTES.

Pour assembler ce kit, vous aurez besoin de plusieurs outils :

Un couteau de modélisme

Utilisez le couteau de modélisme pour détacher les pièces de leur cadre. Ne poussez pas avec vos doigts car vous risqueriez de casser les pièces les plus fragiles.

Du papier abrasif ou une petite lime à bois


Poncez ou limez les aspérités, là où les pièces étaient attachées au panneau.

De la colle à bois ou cyanoacrylate liquide


Collez les pièces suivant le plan de montage. La colle à bois mettra plus de temps à sécher que la colle cyanoacrylate, mais est plus facilement repositionnable en cas d'erreur.

Lorsque vous assemblez ce kit, vérifiez avant de coller si les pièces s'emboîtent correctement.


Vous trouverez peut-être certaines de ces icônes dans le plan de montage.
Elles vous fourniront des informations complémentaires pour votre assemblage.

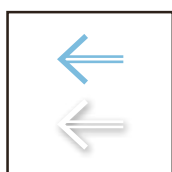

Indique
la direction
du collage

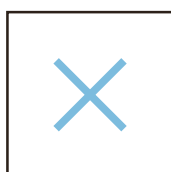


Ne pas
coller

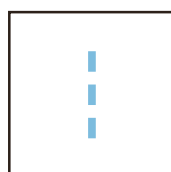

Aligner



Remarque
importante

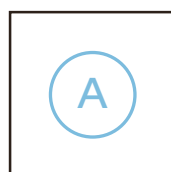

Etape de
construction




Fin
d'étape



Alternatives de
montage

Step 7



A8

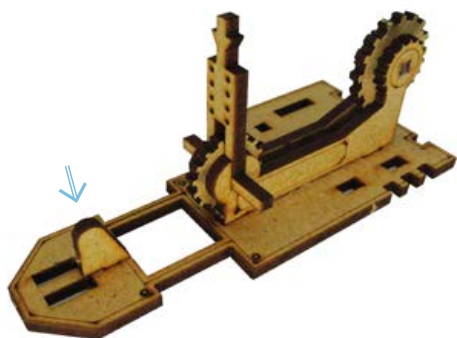

A8

Step 8

A9 + A10


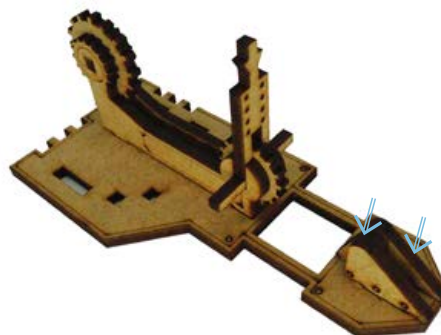


A9


A10

Step 9

A11 + A12

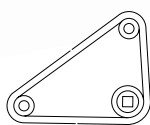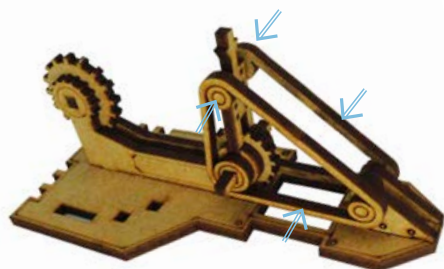


A11

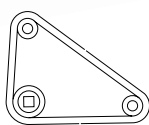

A12

Step 10

A13

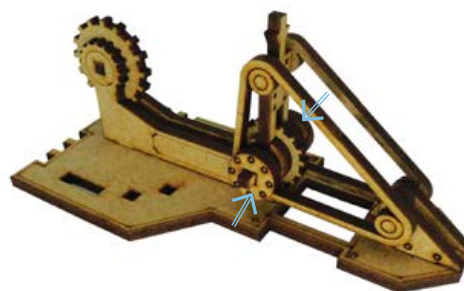


A13

x2

Step 11

A14

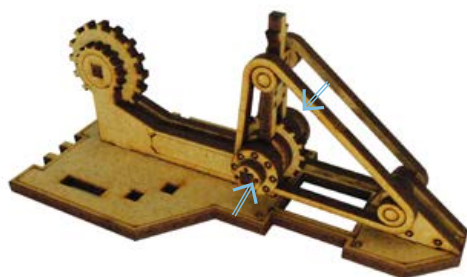


A14

x2

Step 12


A15

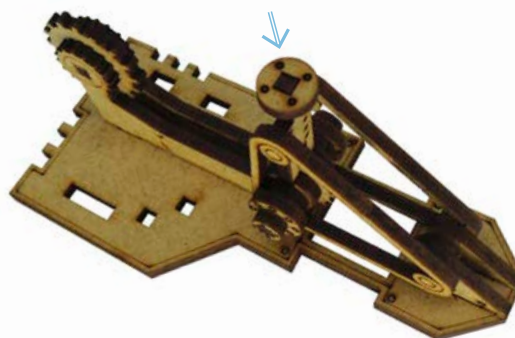


A15

Step 13

A16 + A17





A16



A17

Step 14



A18

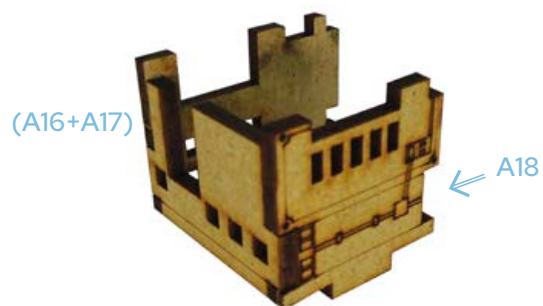

A18

Step 15



A19

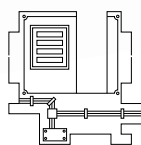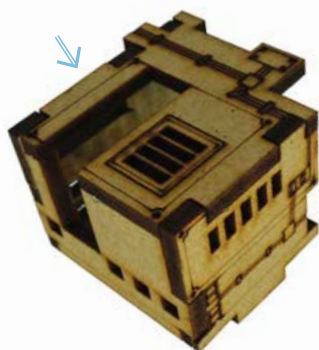

A19

Step 16


A20

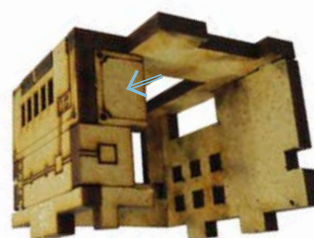

A20

Step 17


A21

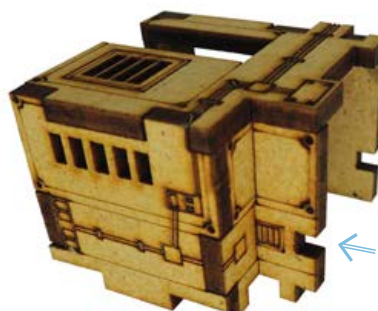

A21

Step 18


A22



A22

Step 13


A23



A23

Step 14


A24 + A25

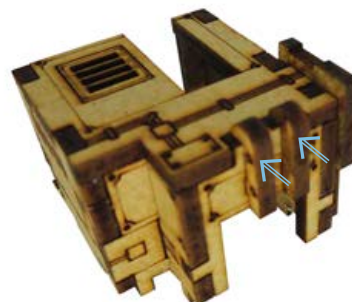

A24


A25

Step 15

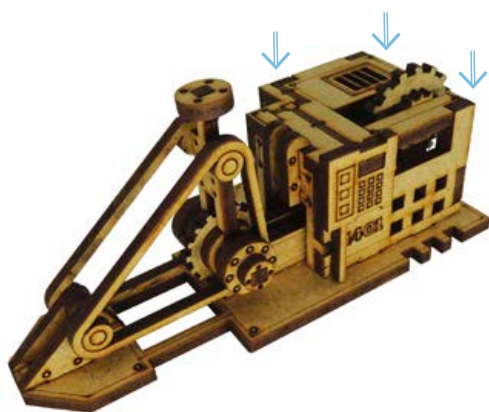

Step 16

A26

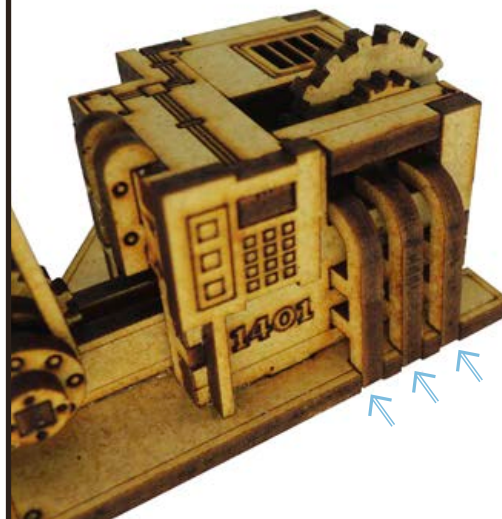

x3

A26


Step 17

A27



x4

A27

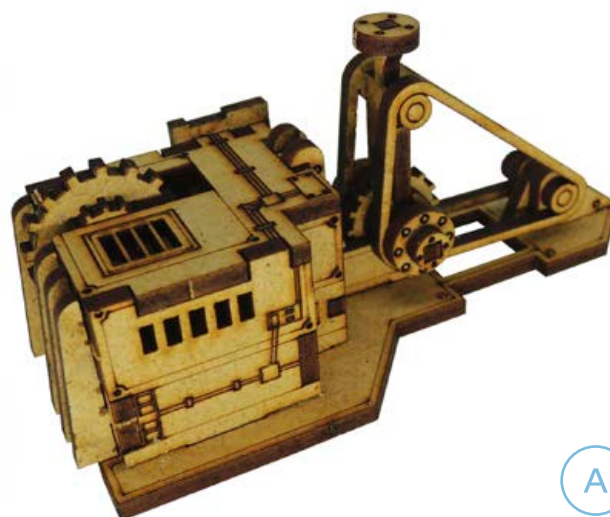

Step 1

B1 + B3

B

B1

B3

B3

Step 2

B2

B2

B2

Step 3

B4

B4

Step 4

B5

B5

Step 5

B7

B7

Step 6

B6

B1

B6 x4

Step 7


B8



B8

Step 8

B9

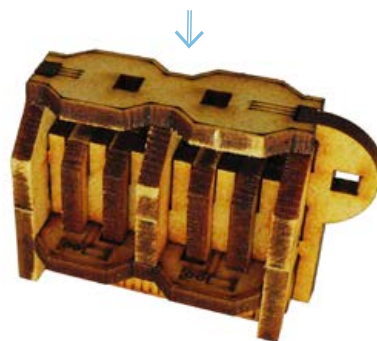

B9

Step 9



B10

Step 10



B11



B11

Step 11

B12 + B13

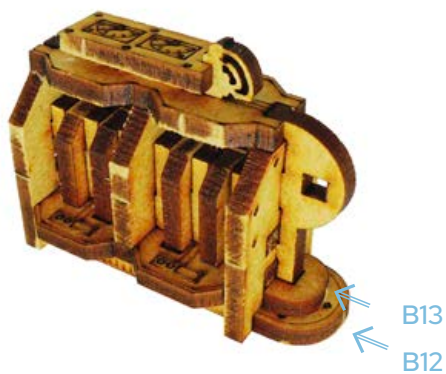

B12

B13

Step 12

B13 + B14



B13

B14

Step 13

B14



B14

Step 14


B15



B15

Step 15

B16


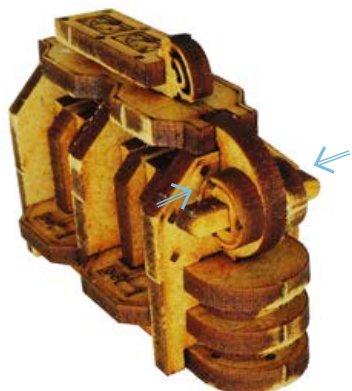


x2

B16

Step 16


B17

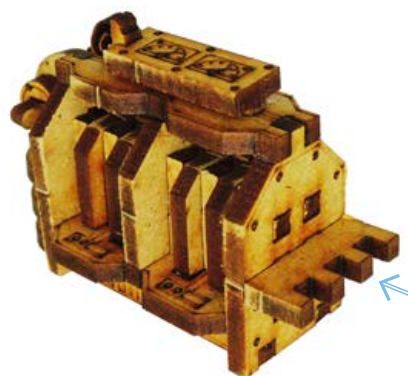

B17

Step 17


B18

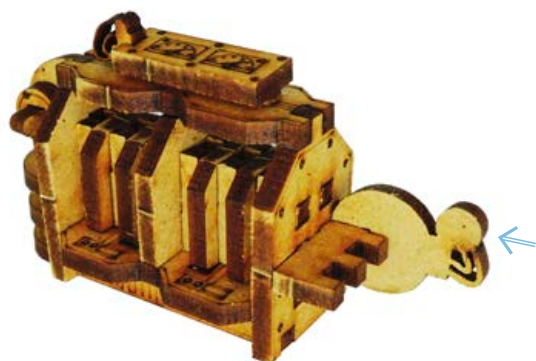

B18

Step 18


B19

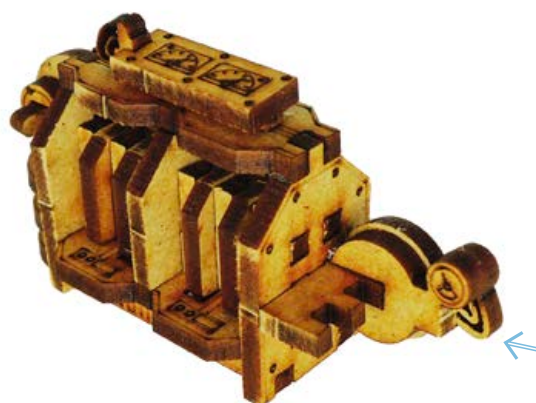

B19

Step 19


B20

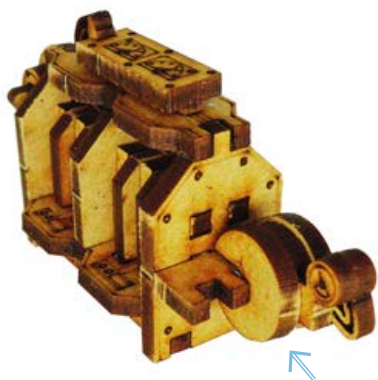

B20

Step 20


B21

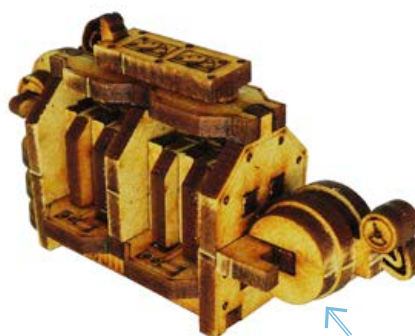

B21

Step 21


B20

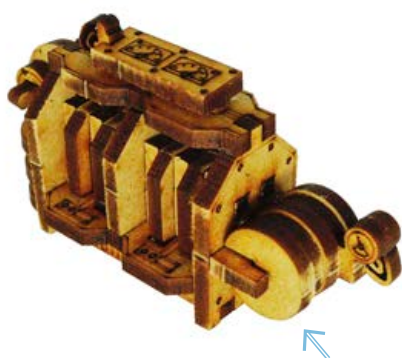

B20

Step 22


B21

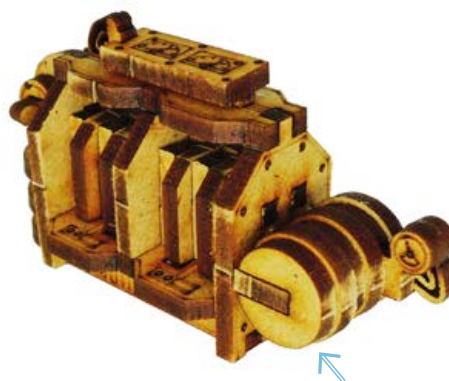

B21

Step 23


B22

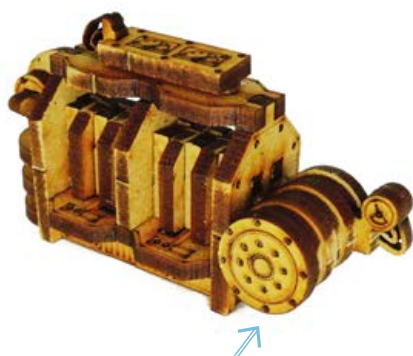


B22

Step 24

B21

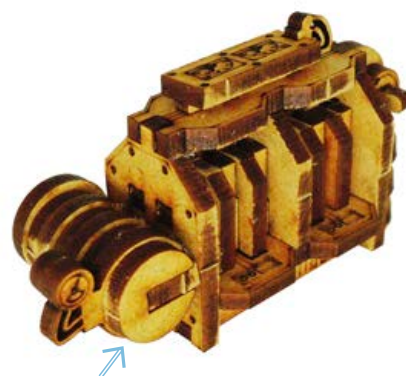

B21

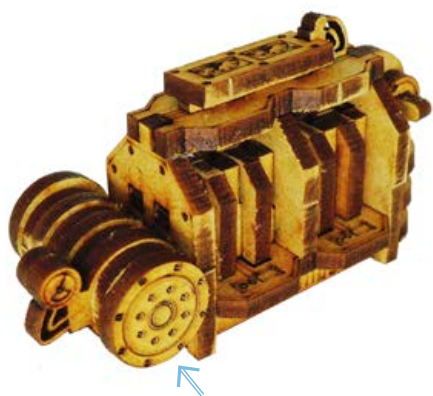

B22

